


## ROOFWRAP MEDIUM AND HIGH WIND ADHESIVE STRIPS DIAGRAM

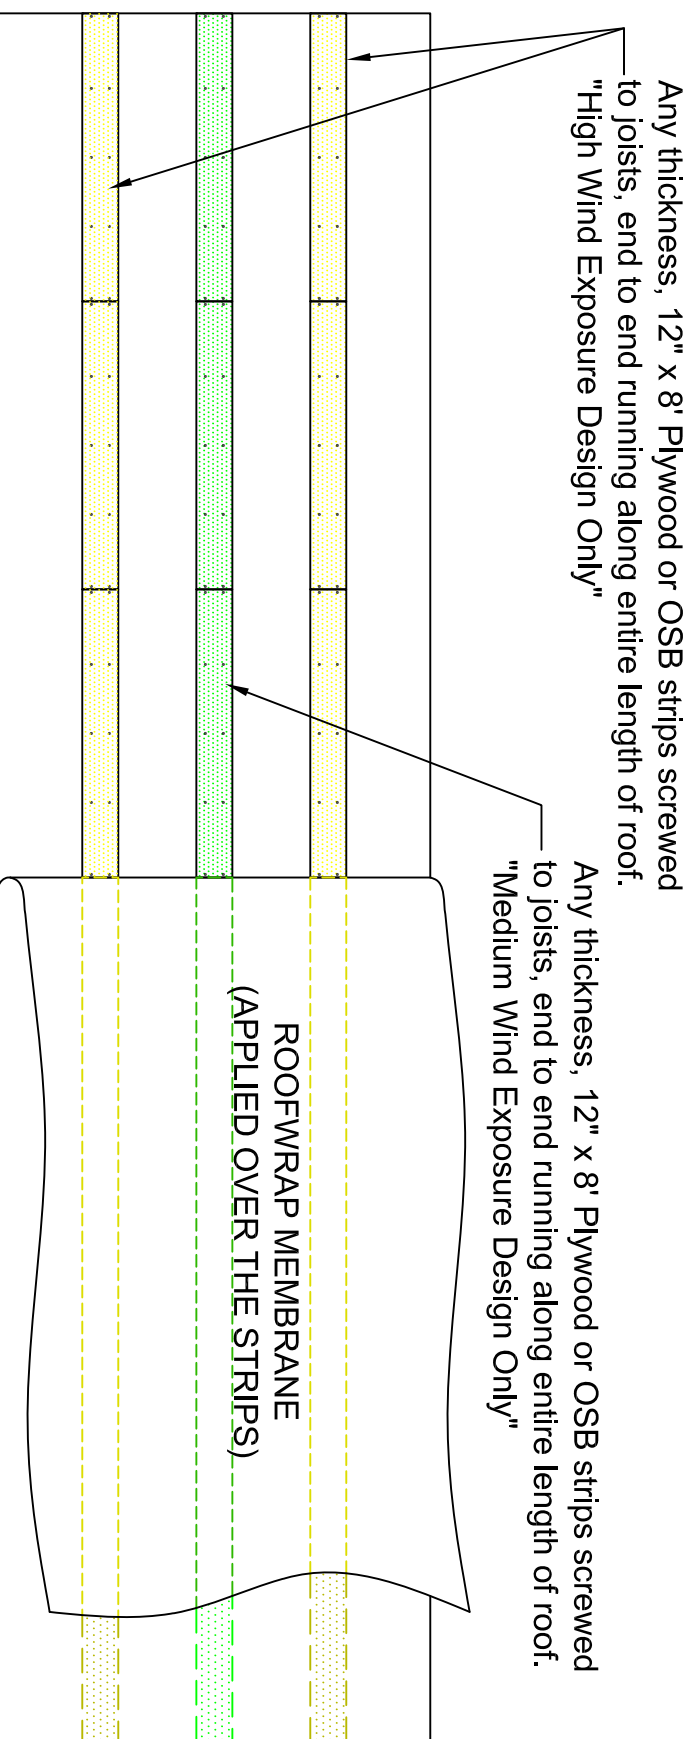

Attach the 12" x 8' wide strips with the supplied screws, end-to-end into the roof trusses, usually at 2 screws per 24" oc, at the location(s) shown above, the full length of the roof. Once strips are affixed, the Roofwrap membrane can be positioned into place. Allow to relax 15 minutes. Pull one end's half of the membrane onto itself to expose strips. Apply Water Base Adhesive onto strips. Immediately, feed the membrane back into place over the wet adhesive. Broom membrane for best contact. Repeat the same process on the other end. See Roofwrap web site "Installation Guide" Section 4.1 for more details or call (206) 550-7336.